


# PHONIC

## Helix Board 24 FireWire MKII

FireWire-enabled Mixing Console

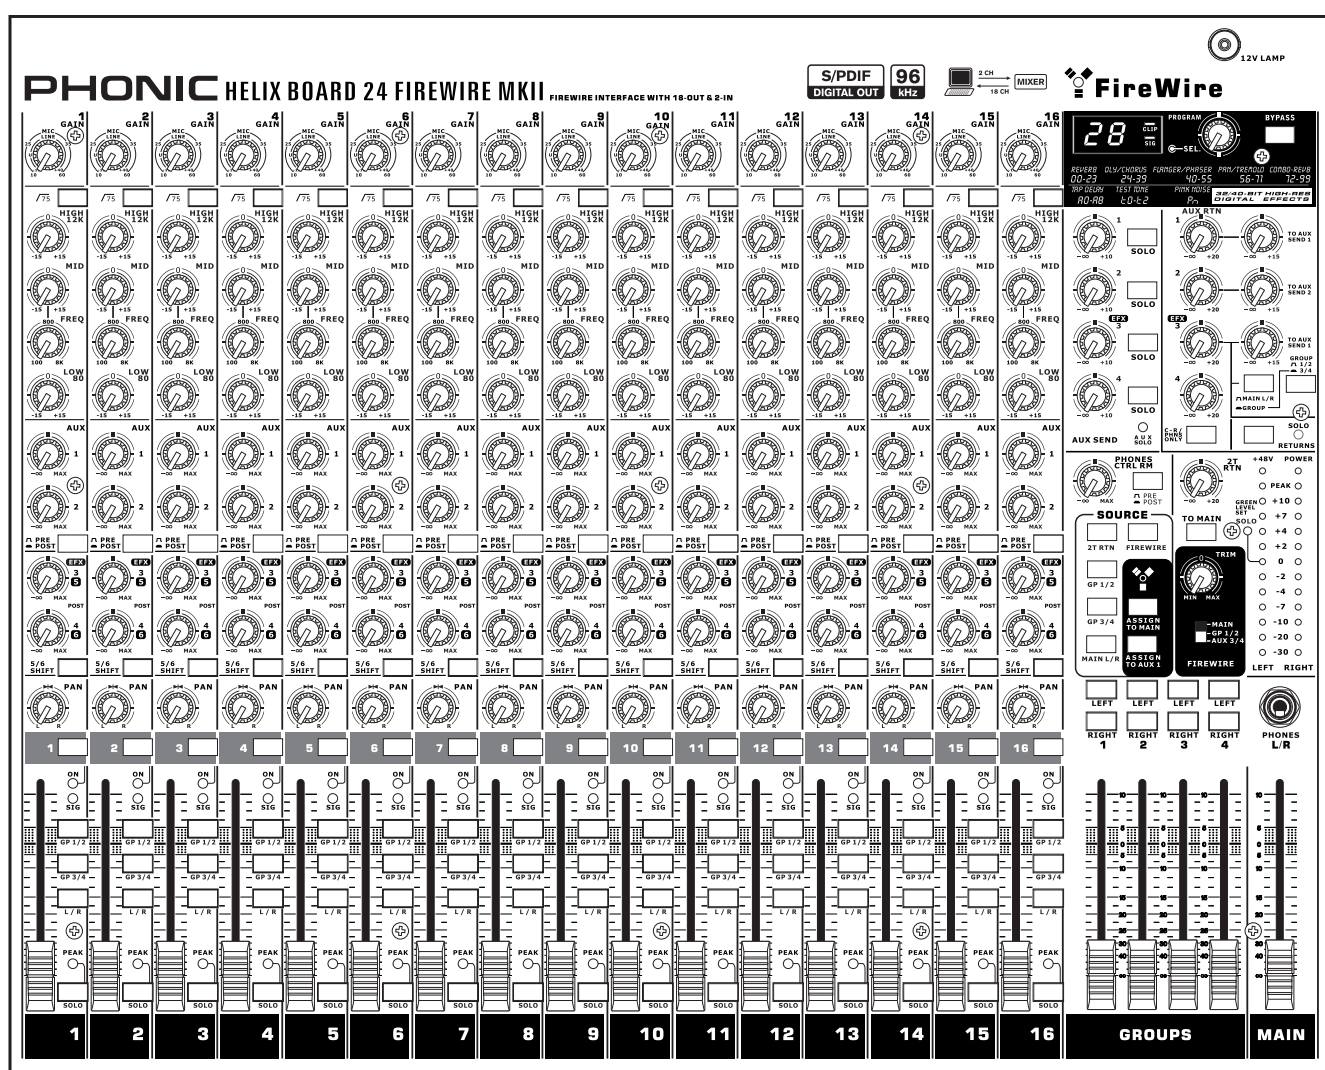

English


## User's Manual

## IMPORTANT SAFETY INSTRUCTIONS

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus. The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

**Warning:** the user shall not place this apparatus in the confined area during the operation so that the mains switch can be easily accessible.

1. Read these instructions before operating this apparatus.
2. Keep these instructions for future reference.
3. Heed all warnings to ensure safe operation.
4. Follow all instructions provided in this document.
5. Do not use this apparatus near water or in locations where condensation may occur.
6. Clean only with dry cloth. Do not use aerosol or liquid cleaners. Unplug this apparatus before cleaning.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plug, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

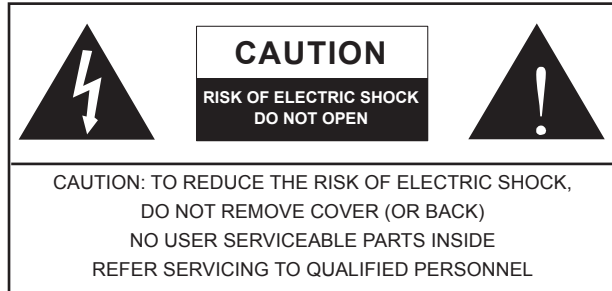

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

**CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.



# Helix Board 24 FireWire MKII

FireWire-enabled Mixing Console

## USER'S MANUAL

### TABLE OF CONTENTS

INTRODUCTION .....	4
FEATURES.....	4
PACKAGE INCLUDES .....	5
GETTING STARTED .....	5
CHANNEL SETUP .....	5
CONVERTING TO TABLE TOP MODE .....	6
INSTALLING THE RACK MOUNT KIT.....	7
MAKING CONNECTIONS .....	8
INPUTS AND OUTPUTS .....	8
MAIN MIXING PANEL .....	10
CONTROLS AND SETTINGS .....	10
REAR PANEL .....	10
CHANNEL CONTROLS .....	11
DIGITAL EFFECT SECTION.....	12
MASTER SECTION .....	13
FIREWIRE PRE / POST SWITCHES .....	15
FIREWIRE INTERFACE.....	16
SYSTEM REQUIREMENTS.....	16
DRIVER INSTALLATION.....	16
CHANNEL ASSIGNMENT.....	20
CUBASE LE .....	20
HELIX BOARD CONTROL PANEL .....	21
DIGITAL EFFECTS TABLE .....	23
APPLICATION .....	24
SPECIFICATIONS .....	26
DIMENSIONS.....	28
BLOCK DIAGRAM .....	29

## INTRODUCTION

Thank you for purchasing the Helix Board 24 FireWire MKII, one of Phonic's newest mixers that sounds great and works hard both in the studio and on the road. The mixer features a FireWire interface that can stream up to 18 independent channels of audio to the computer and return two tracks for monitoring, all at screaming fast transfer rates of up to 24-bit/96 kHz. Also featured is an onboard 32/40-bit digital multi-effect processor providing 100 popular programs plus tap delay, test-tones and foot switch jacks. The multi-directional Input/Output pod makes the device versatile; making rack mounting or table-top connections much easier.

There are sixteen extremely low noise Mic preamps, each with individual phantom power, and sixteen 1/4" phone jacks spread across the Helix Board 24 FireWire MKII 16 mono channels. Each channel features a 3-band EQ (with a sweepable mid control), AUX, EFX and Group sends, as well as a low-cut filter for removing troublesome stage-rumble. Additional features include AUX sends and returns, input and output soloing, four true subgroups, dedicated Mono/Subwoofer output with selectable Low Pass Filter, S/PDIF digital outputs, Steinberg Cubase LE workstation software and an included rack-mounting kit.

We know how eager you are to get started – wanting to get the mixer out and hook it up to your computer is probably your number one priority right now – but before you do, we strongly urge you to take a look through this manual. Inside, you will find important instructions and warnings on the set up, use and applications of your brand new Helix Board 24 FireWire MKII. If you do happen to be one of the many people who flatly refuse to read user manuals, then we just urge you to at least glance at the Instant Setup and FireWire Interface sections. After glancing at or reading through the manual (we applaud you if you do read the entire manual), please store it in a place that is easy for you to find, because chances are there's something you missed the first time around.

## FEATURES

- 24-input analog mixer with extremely low noise circuitry
- 96kHz FireWire interface for streaming 18 independent channels of audio to computer with near-zero latency
- Pre/post switches for swapping streaming input channels to computer from pre low cut, EQ to post EQ, post fader
- 2 channels of monitoring from computer via FireWire interface, can be assigned to control room monitors, main mix and AUX 1
- DFX, our 32/40-bit high definition algorithm digital multi-effect processor with 100 programs plus tap delay and foot switch jacks
- 16 Mic/Line channels with inserts
- 3-band EQ with swept mid-range
- 75 Hz low-cut filter on each channel
- AUX 1 & 2 with Pre/Post switch
- Six AUX send mixing bus
- Four stereo AUX returns, three with effect to monitor
- +48V phantom power on Mic channels
- Four true subgroups with main L and R routing switches
- Direct outputs for multi-track recording
- Control Room and Phones outputs with multi-input source matrix
- Mono out with variable low pass filter from 60 Hz to 160 Hz for subwoofer
- Dual-position I/O pod
- Built-in switching power supply with universal connector, 100-240 VAC, 50/60 Hz
- Rack-mounting kit included
- 44.1k S/PDIF digital audio output
- Compatible with Mac OSX and Windows XP
- Steinberg Cubase LE included



## **PACKAGE INCLUDES**

- 1 x Helix Board 24 FireWire MKII mixer
- 1 x FireWire cable
- 1 x CD-ROM with ASIO & WDM drivers
- 1 x CD-ROM with Steinberg Cubase LE
- 1 x Power cable
- 1 x Rack mounting kit

If any items are missing from your package, please contact your local Phonic dealer



## **GETTING STARTED**

1. Ensure all power is turned off on your mixer. To totally ensure this, the AC cable should not be connected to the unit.
2. All faders and level controls should be set at the lowest level and all channels off to ensure no sound is inadvertently sent through the outputs when the device is switched on. All levels can be altered to acceptable degrees after the device is turned on using the channel setup instructions.
3. Plug any necessary equipment into the device's various outputs. This could include amplifiers and speakers, monitors, signal processors, and/or recording devices.
4. Plug the supplied AC cable into the AC inlet on the back of the device and then into a power outlet of a suitable voltage.
5. Turn the power switch on and follow the channel setup instructions to get the most out of your equipment.


## **CHANNEL SETUP**

1. To ensure the correct audio level of the input channel is selected, each of the Mixer's Channel's ON buttons should be disengaged (which should turn the corresponding LED indicator off), as well as the Solo buttons on each channel and all buttons in the Control Room Source section, with exception to the Main L/R button.
2. Ensure the channel you wish to set has a signal sent to it similar to the signal that will be sent when in common use. For example, if the channel has a microphone connected to it, then you should speak or sing at the same level the performer normally would during a performance; if a guitar is plugged into the channel, then the guitar should also be strummed as it normally would be (and so on). This ensures levels are completely accurate and avoids having to reset them later.
3. Move the Channel fader and Master fader to around the 0 dB mark.
4. Turn the Channel ON.
5. Pushing the channel's Solo button and releasing the Pre/Post button on the CTRL RM section will send the pre-fader signal of the activated channel to the Control Room / Phones mixing bus and the Level Meter will display the Control Room's signal properties.
6. Set the gain so the level meter indicates the audio level is around 0 dB (it is advisable to never let the level exceed 7 dB).
7. This channel is now ready to be used; you can stop making the audio signal.
8. You can now repeat the same process for other channels if you wish.

## CONVERTING TO TABLE TOP MODE

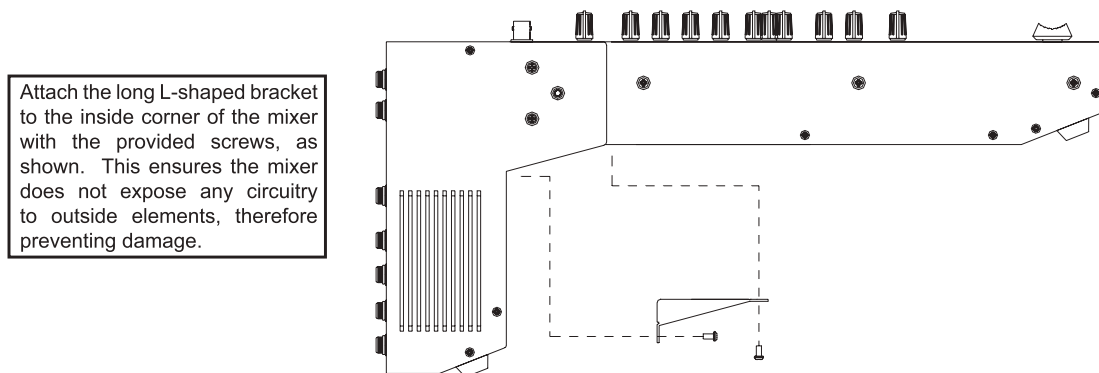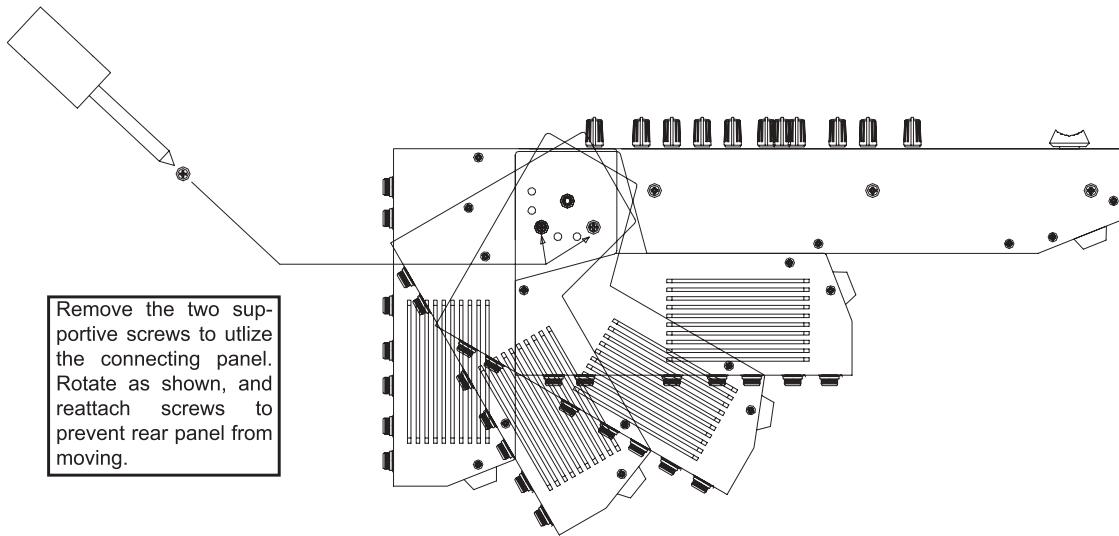

When the connecting panel sits perpendicular to the base of the mixer, the design of the Helix Board 24 FireWire MKII allows users to utilize it as a desk top mixer, with a slightly angled face to allow easier controllability.

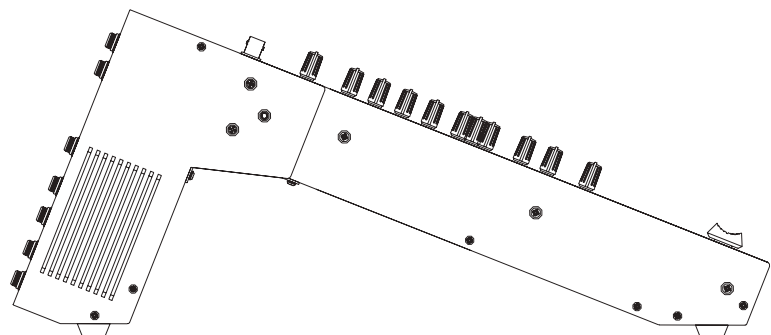


Repeat instructions in reverse to revert back to rack-mount mode


## INSTALLING THE RACK MOUNT KIT

To install the rack mount kit to the Helix Board 24 FireWire MKII, the connecting panel should be first rotated to sit parallel to the mixer's base. This is the optimal position for rack mounting, as it saves space.


Remove the 3 screws that are attached to each side of the mixing console.

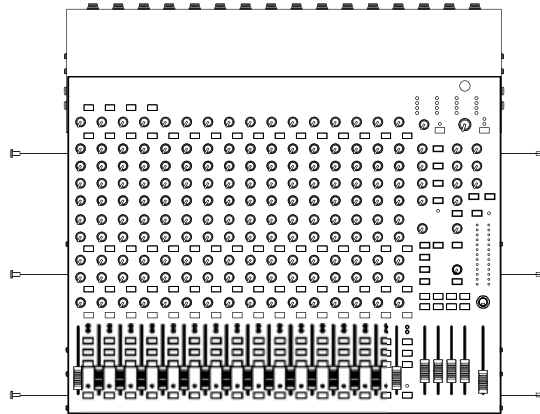

Use the three screw holes and the removed screws to attach the rack mounts to each side of the console.

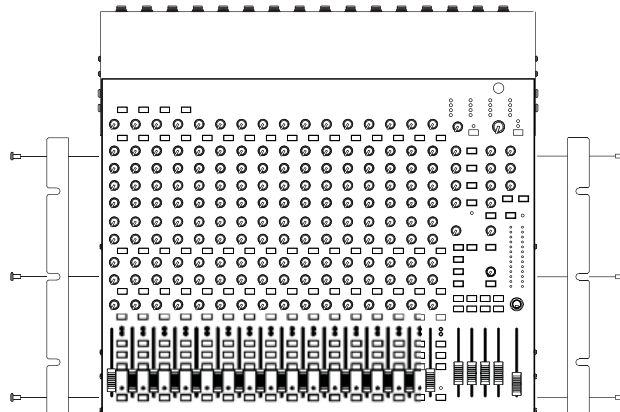

Connect the now-rack-mountable mixing console to your audio rack. 3 screws should be used on either side of the console as to provide the maximum amount of stability.

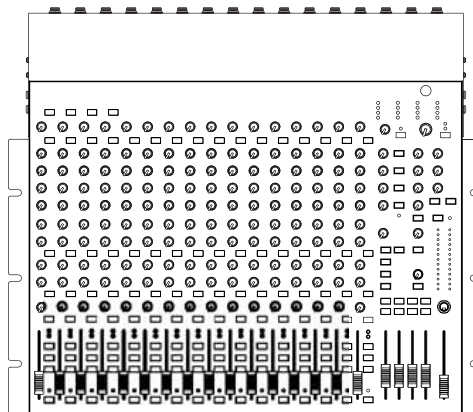

## MAKING CONNECTIONS

### Inputs and Outputs

#### 1. XLR Jacks

These jacks accept typical 3-pin XLR inputs for balanced and unbalanced signals. They can be used in conjunction with microphones – such as professional condenser, dynamic or ribbon microphones – with standard XLR male connectors, and feature low noise preamplifiers, serving for crystal clear sound replication. The Helix Board 24 FireWire MKII features a total of sixteen Microphone inputs.

**NB.** When these inputs are used with condenser microphones, the Phantom Power should be activated. However, when Phantom Power is engaged, single ended (unbalanced) microphones and instruments should not be used on the Mic inputs.

#### 2. Line In Jacks



This input accepts typical 1/4" TRS (balanced) or TS (unbalanced) inputs, for balanced or unbalanced signals. They can be used in conjunction with a wide range of line level devices, such as keyboards, drum machines, electric guitars, and a variety of other electric instruments.

#### 3. Insert Jacks

The primary use for these 1/4" TRS phone jacks is for the addition of external devices, such as dynamic processors or equalizers, to the corresponding mono input channel. This will require a Y cord that can send and receive signals of the mixer to and from an external processor. The tip of the TRS jack will send the signal from the input channel, and the ring will return the signal back to the mixer (the sleeve is the grounding).

#### 4. Direct Outputs

These connections are for the direct output of the signals received by mono channels 1 through to 8, post-fader, post-EQ, post-HPF, and post-mute. They are most commonly used to connect multitrack recorders.

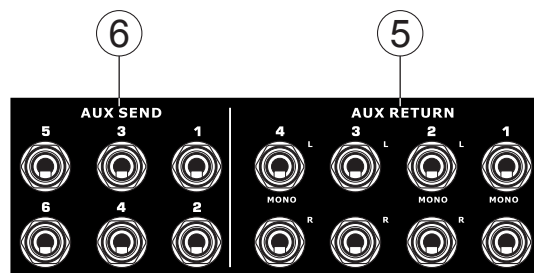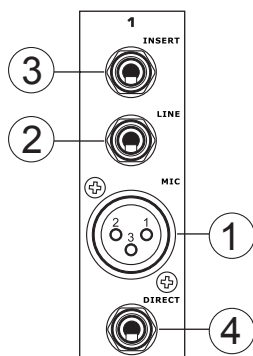

#### 5. Auxiliary (AUX) Returns

The 1/4" TRS AUX Return inputs are for the return of audio to the Helix Board 24 FireWire MKII mixer, processed by an external signal processor. If really needed, they can also be used as additional stereo inputs. The feed from these inputs can be adjusted using the AUX Return controls on the face of the mixer. When connecting a monaural device to the AUX Return 1, 2 and 4 inputs, simply plug a 1/4" phone jack into the left (mono) input, and the signal will appear in the right as well. This, however, does not work for the AUX Return 3.

**NB.** When any device is plugged into the mixer's corresponding EFX Return inputs (AUX Return 3), the signal processed by the mixer's internal digital effect engine is then not fed to the Main L/R; the signal fed into the EFX Return 3 inputs will be instead.

#### 6. Auxiliary (AUX) Sends


These 1/4" TRS phone jacks are the final output of line-level signal fed from the corresponding auxiliary send mixing buses, and are best suited for use with external effect processors or stage monitors. Feeding the output from the Auxiliary outs to an amplifier - and possibly an equalizer - and then to a floor monitor speaker allows artists to monitor their own instruments or vocals whilst performing. The AUX 5 and AUX 6 Sends take their signal directly from AUX Controls 3 and 4, when the 5/6 Shift Button is activated.

#### 7. Group Outs

These 1/4" phone jacks output the final feed from the Group 1, 2, 3 and 4 Faders on the main panel of the mixer. These outputs can be used to feed multi-track records, as well as an amplifier and speakers to be used along with the Main Speakers.

#### 8. CTRL RM (Control Room) Output

These two 1/4" Phone Jack outputs feed the signal altered by the Control Room level control on the face of the mixer. This output has extensive use, as it can be used to feed the signal from the mixer to an active monitor, for the monitoring of the audio signal from within a booth, among many other possible uses.

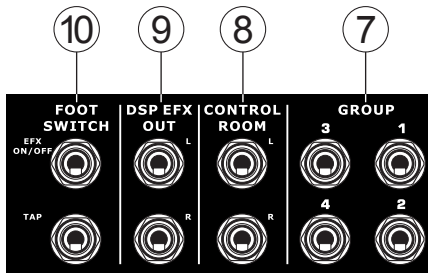

### 9. DSP Effect Output


These ports are for the immediate output of the EFX signal, processed by the internal effect processor, the level of which is not determined by the AUX 3 Return / EFX control on the face of the mixer. This can be used to send to external devices, for monitoring purposes, or returned to a few channel on the Helix Board 24 FireWire MKII, and routed to the AUX 1, 2, and 4 outputs (the AUX 3 control must, of course, be turned down to avoid forming a feedback loop), as well as the Group Outs, allowing the processed signal to be sent to multiple destinations for various applications.

### 10. Foot Switch Jacks

These ports are for the inclusion of a foot switch (non-latchable), used to remotely adjust properties of the built-in Digital Effect processor, to the mixer. The uppermost jack is used to turn the device on and off, where the lower jack is used for adjusting tap delay properties.

### 11. Mono / Subwoofer Output

This XLR and 1/4" TRS output feeds a monaural signal of the Main L-R signals combined or the AUX 4 signal (depending on the Mono Source Select Switch), the level of which is adjusted by the accompanying level control. This is ideal for use with a mono sound system, or for the addition of a subwoofer to your set of speakers, adding more punch to low frequency sounds at your PA or monitoring system. Also featured is an Insert point, allowing external devices, such as a compressor, to be used to alter the mono signal before it is fed through the outputs.

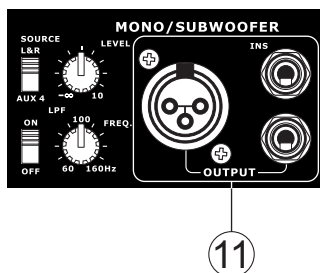


### 12. Main Outputs

These outputs will output the final stereo line level signal sent from the main mixing bus. The primary purpose of the two XLR jacks is to send the main output to external devices, which may include power amplifiers (and in-turn, a pair of speakers), other mixers, as well as a wide range of other possible signal processors (equalizers, crossovers, etcetera). The two 1/4" TRS phone jacks are able to send the Main output to external devices that may run in parallel with the mixer. This may include additional power amplifiers, mixers, PA systems, as well as a wide range of other possible signal processors.

### 13. Main Inserts

Located above each of the Main 1/4" Outputs, the primary use for these 1/4" TRS phone jacks is for the addition of external devices, such as dynamic processors or equalizers, to the main L and main R signals. This will require a Y cord that can send (pre-fader) and receive signals to and from an external processor.

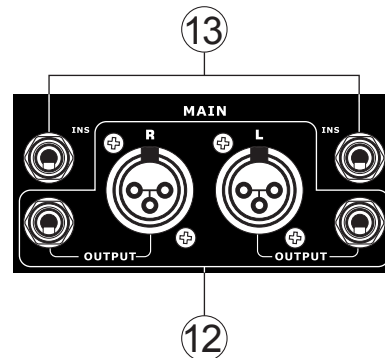



### 14. 2T Return

These inputs accommodate connections from RCA cables, able to receive signals from such devices as tape and CD players.

### 15. Record Outputs

As with the 2T Return ports, these outputs will accommodate RCA cables, able to be fed to a variety of recording devices.

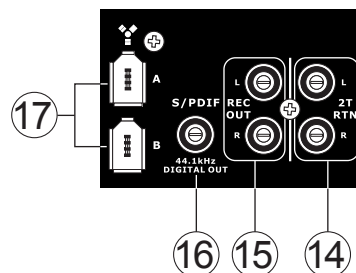

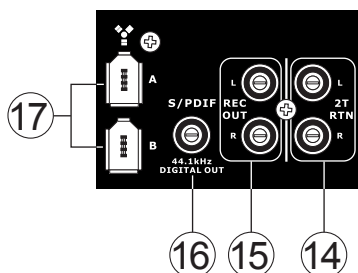

## 16. S/PDIF Output


This RCA S/PDIF (Sony / Phillips Digital Interface) jack is for the output of digital audio signals, allowing the Main L&R audio from the Helix Board 24 FireWire MKII to be passed to another device without having to convert the signal from digital to analog and back again. The output sampling rate is set to 44.1 kHz per second – however, if the FireWire interface is in use, it will use the sampling rate decided by the Helix Board control software.

## 17. FireWire Interface

These two FireWire ports are for connecting the Helix Board 24 FireWire MKII to any PC or Macintosh computer. They allow all 16 input channels, as well as an additional channel (as decided by the FireWire Select Switch), to be sent to a PC or Mac computer. The main stereo signal of the computer is also returned to the Helix Board 24 FireWire MKII. The returned FireWire signal can be utilized by selecting it in the Control Room Source section on the face of the mixer.

## 18. Power Connector and Fuse Holder


This port is for the addition of a power cable and supply, allowing power to be supplied to the mixer. Please use the power cable that is included with this mixer only. The Fuse holder, located above the AC Power connector, is, of course, for Helix Board 24 FireWire MKII fuse. If the fuse happens to blow, open the holder cover, and replace the fuse with a suitable replacement (as indicated underneath the power connector).

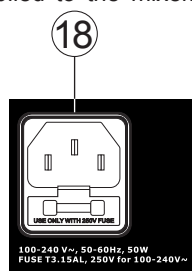

## Main Mixing Panel

### 19. 12V Lamp

This BNC socket allows you to attach a 12 Volt gooseneck lamp, allowing better visibility in areas with poor light.

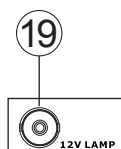

### 20. Phones Output

This output port is best suited for use with headphones, allowing monitoring of the mix. The audio level of this output is controlled using the Phones control on the front panel's master section.



## CONTROLS AND SETTINGS


### Rear Panel

#### 21. Power Switch

This switch is used to turn the mixer on and off. Ensure you turn all level controls down before activating. Activating the Power Switch will be accompanied by an illuminated LED located above the right Level Meter.

#### 22. Phantom Power

By turning this switch selector to the ON position will activate +48V of phantom power for the corresponding microphone inputs, allowing condenser microphones (well, the ones that don't use batteries) to be used on these channels. Activating the master Phantom Power switch will be accompanied by an illuminated LED above the left channel Level Meter. Before turning Phantom Power on, turn the level control down of the channel you wish to activate to a minimum and lower all master output levels, as to avoid the possibility of a ghastly popping sound from the speakers.

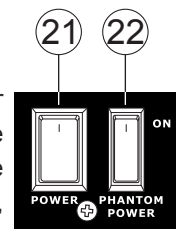


**NB.** Phantom Power should be used in conjunction with balanced microphones. When Phantom Power is engaged, single ended (unbalanced) microphones and instruments should not be used on the Mic inputs. Phantom Power will not cause damage to most dynamic microphones, however if unsure, the microphone's user manual should be consulted.

#### 23. Mono Output Source Select Switch and Volume Control


The rotary control to the right adjusts the final output level of the Mono/Subwoofer output. By using the switch on the left, users are able to select signal they wish to send through the Mono/Subwoofer output between the main mix and AUX 4 mix. If, for example, there is audio in the main mix you do not wish to send to the subwoofer, simply sending all the audio you wish to use to the AUX 4 send and set the select switch to AUX 4.

#### 24. Low Pass Filter

The mono output on the Helix Board 24 FireWire MKII includes a Low Pass Filter (LPF) for removing high frequency sounds to make the audio more appropriate for use with subwoofers. The switch to the left turns the LPF on and off, and the rotary control on the right allows users to adjust the cut-off frequency between 60Hz and 160Hz.

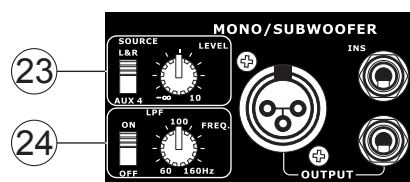



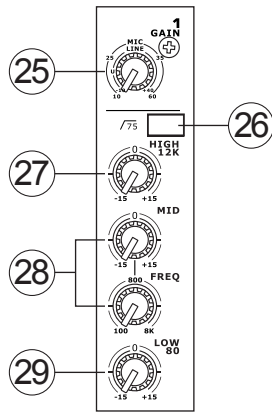

## Channel Controls

### 25. Gain Control

This controls the sensitivity of the input signal of the Line/Microphone input of mono channels. The gain should be adjusted to a level that allows the maximum use of the audio, while still maintaining the quality of the feed. This can be accomplished by adjusting it to a level that will ensure the peak indicator doesn't light up, as specified in the channel set up section.

### 26. Low Cut Filter (75 Hz)

This button, located on channels 1 through to 16, will activate a high-pass filter that reduces all frequencies below 75 Hz at 18 dB per Octave, helping to remove any unwanted ground noise or stage rumble.

### 27. High Frequency Control


This control is used to give a shelving boost or cut of  $\pm 15$  dB to high frequency (12 kHz) sounds. This will adjust the amount of treble included in the audio of the channel, adding strength and crispness to sounds such as guitars, cymbals, and synthesizers.

### 28. Middle Frequency Control

This control is used to provide a peaking style of boost and cut to the level of middle frequency sounds at a range of  $\pm 15$  dB. The Helix Board 24 FireWire MKII mixer also provides a sweep control, allowing you to select a center frequency between 100 Hz and 8 kHz. Changing middle frequencies of an audio feed can be rather difficult when used in a professional audio mix, as it is usually more desirable to cut middle frequency sounds rather than boost them, soothing overly harsh vocal and instrument sounds in the audio.

### 29. Low Frequency Control

This control is used to give a shelving boost or cut of  $\pm 15$  dB to low frequency (80 Hz) sounds. This will adjust the amount of bass included in the audio of the channel, and bring more warmth and punch to drums and bass guitars.

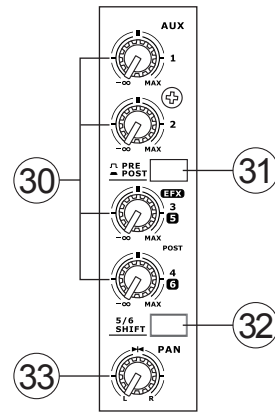

## 30. AUX Controls

These four AUX controls alters the signal level that is being sent to the auxiliary 1 to 4 mixing buses, the signal of which is suitable for connecting stage monitors, allowing artists to listen to the music that is being played, or to fed to an external effect processors. AUX 1 and 2 feature a Pre/Post button, which alternates the feed to the AUX mixing bus between a post and pre-fader feed. AUX 3, on the other hand, acts as an EFX send for the internal effect processor, or simply as an Auxiliary output. Both the AUX 3 (EFX) and AUX 4 controls are post fader and are sent directly to the corresponding outputs.

### 31. Pre/Post Switch Selector


AUX 1 and 2 feature a Pre/Post button, which alternates the feed to the AUX mixing bus between a post and pre-fader feed.

### 32. 5/6 Shift Button

This button changes the routing of the AUX 3 and 4 controls, allowing the channel's signal to be directly output through the AUX 5 and 6 outputs respectively.

### 33. Pan Controls

This alternates the degree or level of audio from that particular channel that the left and right side of the main mix should receive.

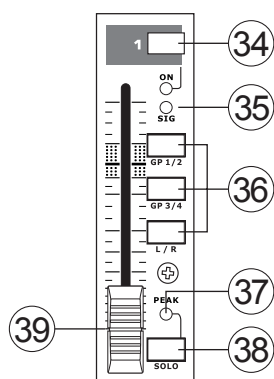

## 34. On Button and Indicator

This turns the channel on, allowing the user to use the feed from the channel's inputs to supply the MAIN L/R, GROUP 1/2, GROUP 3/4, AUX and EFX buses (as specified by the user, of course). The corresponding indicator will be illuminated when turned on.

## 35. Sig Indicator

This LED indicator shows when the input level reaches -20 dBu, basically showing when a signal is received by the corresponding channel.

## 36. 1-2, 3-4 and L-R Buttons

These handy buttons allow you to decide the audio path of the corresponding channel. Pushing the "1/2" or "3/4" buttons allows the signal to be sent to the Group 1/2 or 3/4 mixes respectively, where the "L-R" allows it to be sent to the Main L/R mix.

## 37. Peak Indicator


This LED indicator will illuminate when the channel hits high peaks, 6 dB before overload occurs. It is best to adjust the channel level control so as to allow the PEAK indicator to light up on regular intervals only. This will ensure a greater dynamic range of audio. This indicator also doubles as a Solo indicator, when the SOLO button is engaged.

## 38. Solo Button

The Solo button is pushed to allow the signal of the corresponding channel to be sent to the Control Room / Phones mixing bus (pre or post fader, depending on the properties selected by the pre / post button, located below the solo level control), for use with either headphones or studio monitors. This button also allows for easier isolation of individual channel signals, ensuring setting of the input gain or tracking of audio by sound engineers is made simpler. The Peak indicator (above the Solo button) also doubles as a Solo Indicator, illuminating when the signal reaches high peaks.

## 39. Channel Level Control (Fader)

This 60 mm fader will alter the signal level that is sent from the corresponding channel to the corresponding mixing buses.

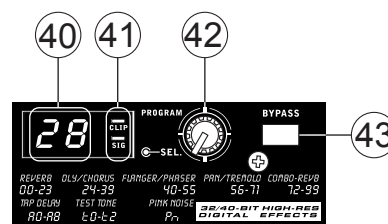

## Digital Effect Engine

### 40. Digital Effect Display

This 2-digit numeric display shows the program number that is currently applied to your EFX audio signal. When you rotate the Program control, you can scroll through different program numbers; however the display will revert back to the original program if a new program is not selected within a few seconds. For a list of available effects, please observe the Digital Effect Table.

### 41. Sig and Clip Indicators

Located within the Digital Effect Display are Clip and Sig LEDs. The Sig LED will light up when any signal is received by the effect processor, and the Clip LED will light up shortly before excessive signals are dynamically clipped. If the Clip LED lights up too often, it may be advisable to turn down the AUX 3/ EFX master control to ensure the signal level is not excessive.


### 42. Program Control

This control is used to scroll through the various effects. Turning the control clockwise will allow users to ascend into higher program numbers, and turning it counter-clockwise will allow users to descend into lower program numbers. When turning to a new program, a small LED will flash until you push the program knob down – this will apply the effect. When a tap-delay effect is selected, pressing this control will allow users to select the tap-delay time.

By pushing the button several times, the effect processor interprets the time between last two pushes and remembers this as the delay time – until the button is pushed again. This is kept even after the power is turned off. When the tap delay effect is selected, a small LED (located between the two digit display) will flash within the digital effect display window at the selected intervals.

### 43. Effect Bypass

Use it to bypass the effects and monitor your audio before and after the effect is applied. When the effect engine is bypassed, the 2 small indicators on the digital effect display will flash.

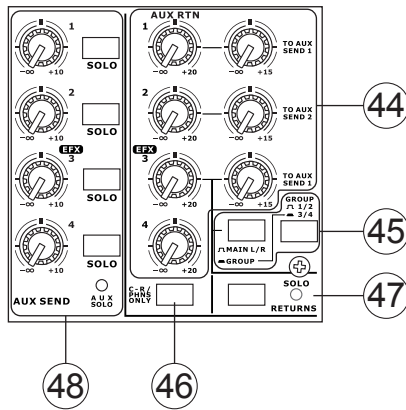

## Master Section

### 44. AUX Return 1 to 4 Controls and Solo Buttons

These controls adjust the signal level of audio fed through to the stereo AUX Return inputs. The “To AUX Send 1” and “To AUX Send 2” controls adjust the pre-fader level of the signal from the AUX Return controls to the corresponding AUX mixing buses for effect-to-monitor sends. The AUX 3 control typically adjusts the signal level of audio fed through to stereo AUX Return 3 inputs, however, if no device is plugged into the AUX Return 3 inputs, it then acts as the output level control of the built-in Digital Effect Engine.

### 45. Main L/R - Group Buttons

The first of these buttons changes the destination of the signal sent from the AUX Return 3 mixing buses between the Main L/R and Group mixing buses. The second button works when the user selects to send the signal “To Group”, allowing the signal to be sent to either Group 1-2 or Group 3-4.

### 46. C-R / PHNS Only Button


The “Control Room / Phones Only” button that is located below AUX Return Control 4 allows users to send the AUX Return 4 post-fader signal to the Control Room / Phones mixing bus for monitoring purposes.

### 47. Solo Return Button and Indicator

Pushing this buttons allows you to send the signal from all AUX Returns to solo mixing bus (which is, intern, sent to the Control Room / Phones mixing bus). When the Solo is activated, the corresponding LED indicator will illuminate.

### 48. AUX Send 1 to 4 Master Controls and Indicator

These controls adjust the final level of the AUX 1, 2, 3 and 4 signals (as taken from the AUX level controls 1 to 4 on each channel strip), the audio of which is sent to the corresponding AUX sends. The AUX 3 control not only adjusts the output level of the AUX 3/EFX mix that is sent to the corresponding output, but also the signal sent to the built-in Effect Processor as well. The Solo buttons allow you to direct the AUX Send signals to the Control Room / Phones mixing bus for monitoring purposes. When any of the AUX solo buttons is activated, the AUX Solo LED will illuminate.

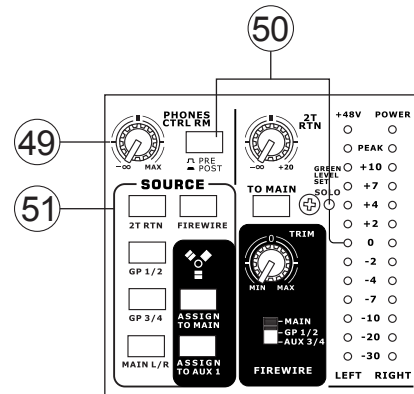

### 49. Control Room / Phones Control

This control is used to adjust the audio level of the Control Room and Phones feeds, for use in the monitoring and tracking of audio. The signal is then sent to the Control Room outputs on the rear of the Helix Board 24 FireWire MKII mixer, as well as the Phones jack on the face of the mixer.


### 50. Pre / Post Button and Solo Indicator

This button alternates the solo source signals between those of post-fader and pre-fader feeds, to be sent to the Solo and Control Room / Phones mixing bus. When the Solo indicator, located beside the main level meter, is illuminated, it means one or more Solo buttons has been pushed; therefore the Main Level meter will display properties of the Solo signal, which is helpful in the setting of channel properties. If Solo indicator illuminates green, this means the Solo feed is a pre-fader signal; if the solo indicator illuminates red, the feed is post-fader.

### 51. Control Room Source Buttons

These five buttons, located below the Phones / Control Room control, allow users to select the various possible sources for the Control Room and Phones outputs. By simply pushing one of these, users have the ability to monitor the 2T return, Group 1-2, Group 3-4, Main L-R and returned FireWire signals, either together or individually. There is also a “Control Room / Phones only” button located beneath the Aux Return 4 control, that, when pushed, sends the AUX Return 4 signal to the Phones / Control Room mixing bus.

Priority	Signal
High	From Solo
Low	Selected Source(s):
	Main L-R / Group 1-2 / Group 3-4 / 2T Return / Aux Return 4 / FireWire Return

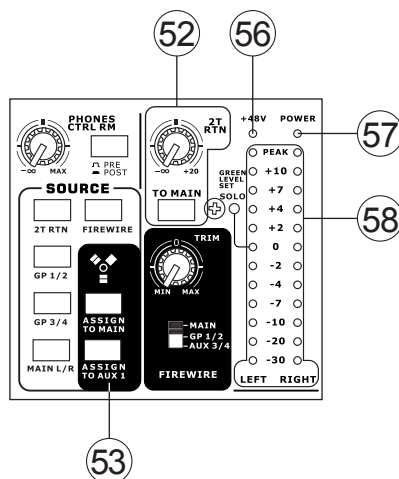

## 52. 2T Return Control and To Main Button


Turning the 2T Return level control adjusts the signal level of the feed from the 2T Return inputs. The “to Main” button that accompanies this control allows users to send the 2T return signal to the Main L-R mixing bus. When this is done, the Main L-R mix signal is not sent to the Rec Out, as to avoid producing a feedback loop when recorded signals are fed back into the 2T return.

## 53. FireWire Source and “Assign To” Buttons

Pushing the FireWire button in allows users to send the signal received through the FireWire interface to the Main L-R mix and/or AUX 1 mix, as selected by the corresponding button.

## 54. FireWire Selector Switch

This switch determines which of the Helix Board’s signals will be used for the 17th and 18th channels sent through the FireWire interface to the computer. Users can choose to send the stereo signal from the Main L/R, Group 1/2 or AUX 3/4 mix and utilize the signal on their computer through their DAW software.

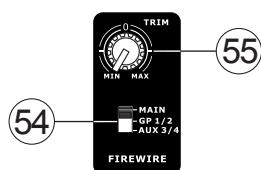

## 55. FireWire Trim Control

This trim control can be used to adjust the level of the outgoing FireWire signal for Channels 17 and 18 (which will be received by the computer). If the input signal received by your computer is noticeably excessive, using this control could help to attenuate the signal to an acceptable degree.

## 56. +48V Indicator

This indicator will illuminate when the master Phantom Power switch is activated.


## 57. Power Indicator

The Power Indicator will light up when the power of the mixer is on.

## 58. Level Meter

This dual 12 segment level meter gives an accurate indication of when audio reach certain levels. The 0 dB indicator illuminates is approximately equal to an output level of +4 dBu (balanced), and the PEAK indicator illuminates about 1.5 dB before the signal is dynamically clipped. It is advised that users set the various level controls so that the level sits steadily around 0 dB to make full use of audio, while still maintaining fantastic clarity.

If any Solo buttons are activated on channels 1 through 16, or in the master section, the Level Meter will display the Solo signal’s properties. However, if no solo buttons are activated, the Control Room / Phones selected sources (Main L-R, Group 1-2, Group 3-4, 2T Return, Aux Return 4 and FireWire Return) signal properties are displayed by the Level Meter. In this case, the Level meter will display the sum of the selected signals.

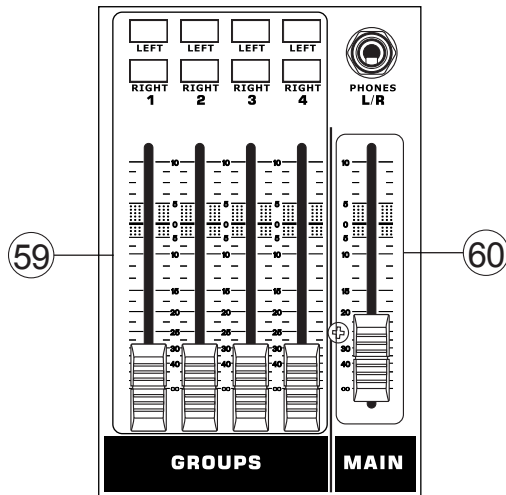

### 59. Group 1 to 4 Controls

These four faders are the final level control for the Group 1 to 4 audio feeds, sent to the corresponding Group outputs on the rear of the Helix Board 24 FireWire to feed external devices such as effect processors, and, quite commonly, multi-track recorders. These faders can be fed a signal from the various input channels (as well as the AUX Return 3) depending on your selections. When pushed all the way up, these faders provide 10 dB of gain to the signal, and, when set all the way down, effectively mute the signal.


The Group Controls also feature individual left and right buttons that allow users to send the various Group signals to the Main Left and Right mix. This can be handy when wanting to combine the signals from different input channels and control their input levels simultaneously, then send them to the Main audio mix. A good example of when this can be done is when multiple inputs are used for drums; users can combine these inputs together to be controlled much simpler by a single fader.

### 60. Main L/R Fader

This fader is the final level control for the Main Left and Right audio feeds, sent to the Main L and R outputs. When pushed all the way up, the Main L/R fader provides 10 dB of gain to the signal, and when set all the way down, the signal is effectively muted.

## FireWire Pre / Post Switches

On the bottom of the Helix Board 24 FireWire MKII, users will find a small cover held in place by a screw. By removing this screw and sliding the cover to the left, the pre/post switches for every input channel are accessible. Flicking one of these switches to the left will ensure the signal sent through the FireWire interface from that particular channel is affected by the channel's 3-band EQ, level fader and low-cut filter; to the right, the signal will be unaffected by these controls. It is advised that users set the pre/post settings for each input channel before plugging the unit into an AC power source. Replace the cover and screw before plugging the mixer back in and turning it on.

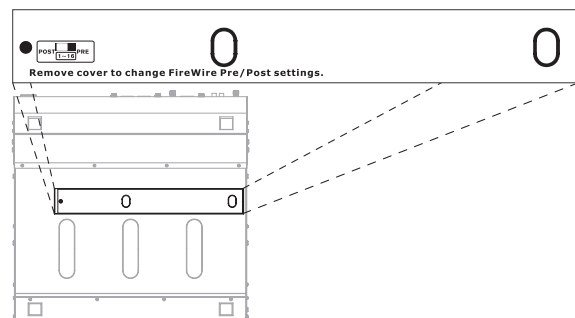

Underneath the Mixer

## FireWire Interface

### System Requirements

The following are the minimum required specifications for use with the Helix Board 24 FireWire MKII mixer. If your computer does not meet these requirements, you will experience lagging of audio and possible freezing of your computer when attempting to operate the mixer.

#### Windows

- Microsoft® Windows® XP SP1 and SP2
- Available FireWire port (suggested FireWire Interface: ADS Pyro 64 FireWire card with TI chip)
- Intel Pentium® 4 processor or equivalent AMD Athlon processor
- Motherboard with Intel or VIA chipset
- 5400 RPM or faster hard disk drive (7200 RPM or faster with 8 MB cache recommended)
- 256 MB or more of RAM (512 MB recommended)

#### Macintosh


- OS X 10.3.5 or later with native FireWire support
- G4 or newer processor
- 256 MB or more of RAM

### Driver Installation

To use the Helix Board FireWire mixer efficiently (or at all) on a PC, it is important to install all the necessary drivers from the included CD (ASIO and WDM drivers). It is important that users read all instructions carefully before continuing on to the each step of installation, as users will be required to unplug and plug in their FireWire device. This is not necessary for Mac users.


#### Windows XP (with Service Pack 1 or 2)

1. It is recommended that you quit all applications before starting the installation process.
2. Ensure the Helix Board FireWire is not yet connected to your Computer's FireWire input.
3. Insert the installation CD included with your Helix Board FireWire mixer into the CD-ROM drive of your computer.  
If the CD does not automatically start the installation process within a few moments, then navigate to "My Computer" → your CD-ROM drive → "Drivers and Control Panel" → double-click "setup.exe" to begin the installation manually. The Helix Board FireWire Control Panel software also will be installed at this time.
4. Follow the installation instructions.

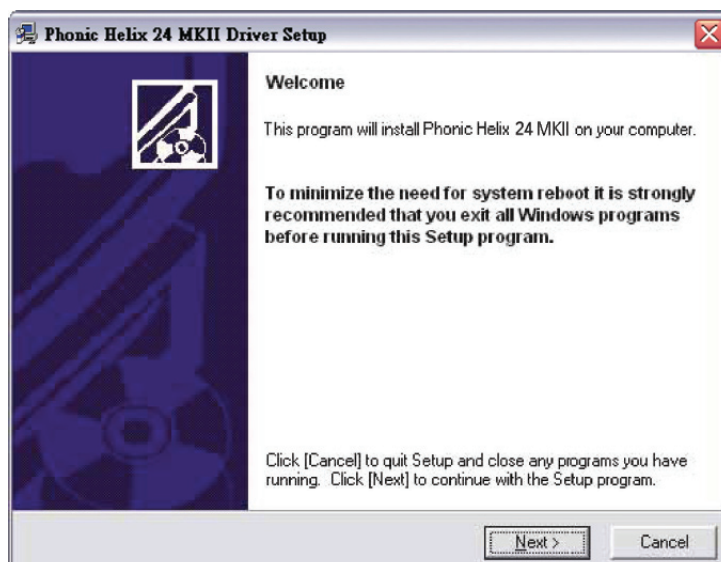


Make sure no other programs are running on your PC and that the Helix Board 24 FireWire MKII is not connected to your PC, then click "Next".




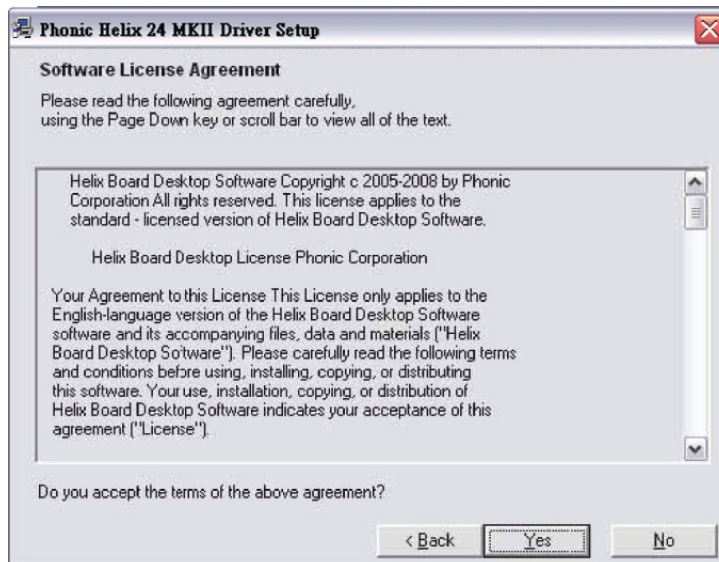


Read and accept the terms of the License Agreement and click “Yes” to continue.

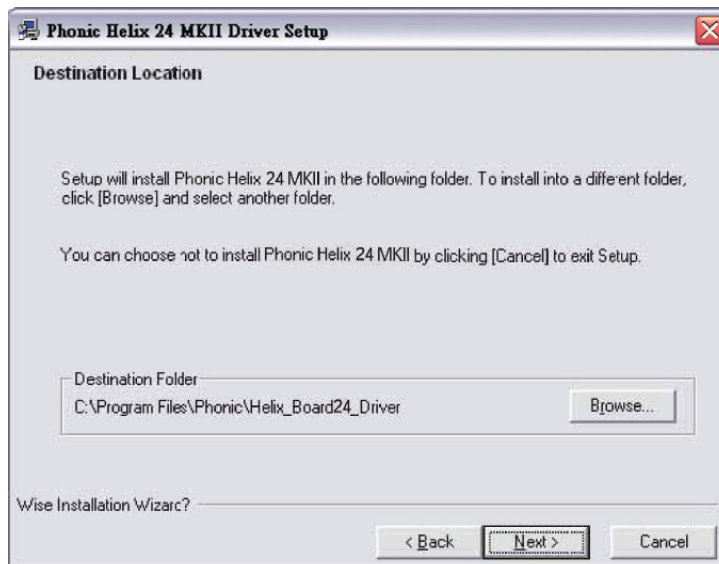

Either select a new destination for the installation, or else click “Next” to accept the default directory.

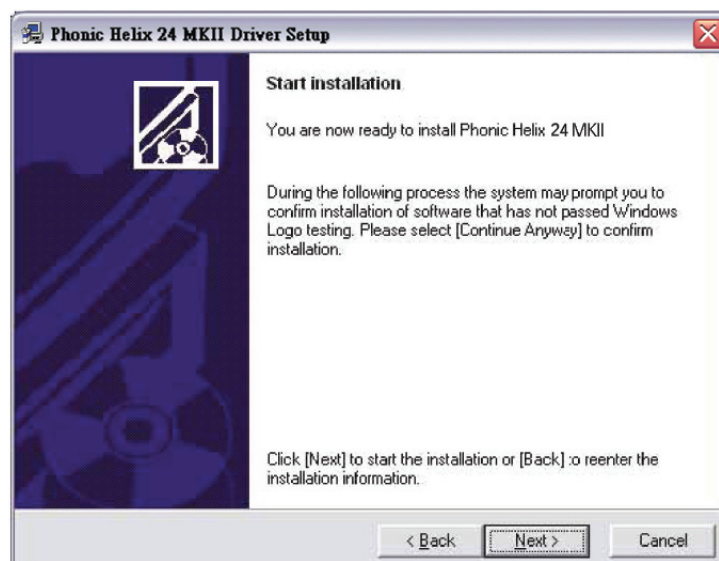


Click “Next” to begin the installation.

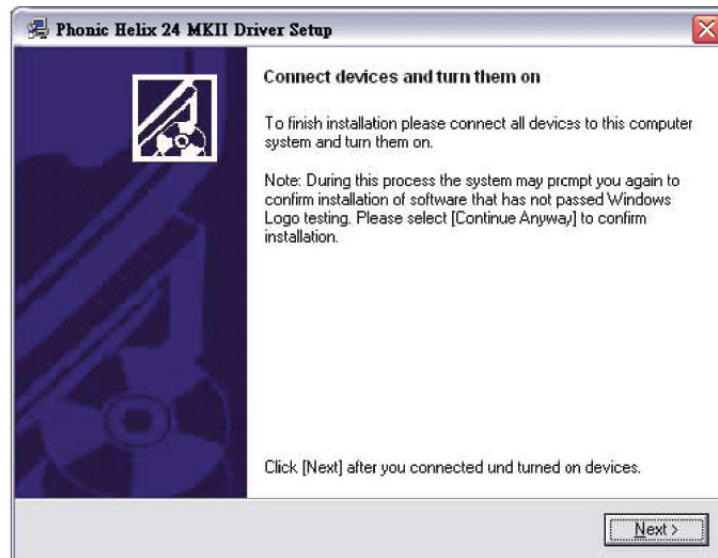

Connect the Helix Board 24 FireWire MKII to the Computer and turn the power on.



If a message is displayed indicating that the software has not passed Windows Logo test,

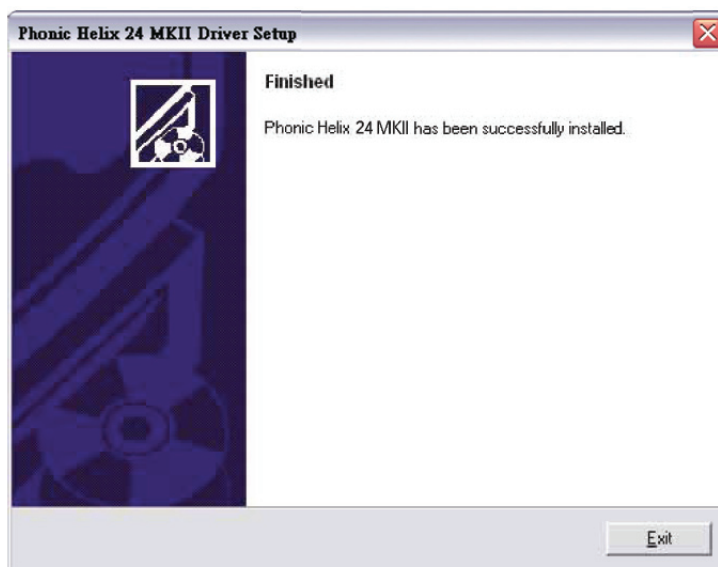


click "Continue Anyway".


After installation is complete, users are free to use the device as they wish.

## Macintosh OS X (10.3.5 or later)

The Helix Board 24 FireWire MKII works with the primary audio drivers of Macintosh OS X 10.3.5 and later. First verify that you are running Macintosh OS X 10.3.5 or above, then connect the Helix Board 24 FireWire MKII to a FireWire port to the computer. To ensure your Helix Board 24 FireWire MKII is working, enter the Utilities folder and double-click the Audio MIDI Setup icon.

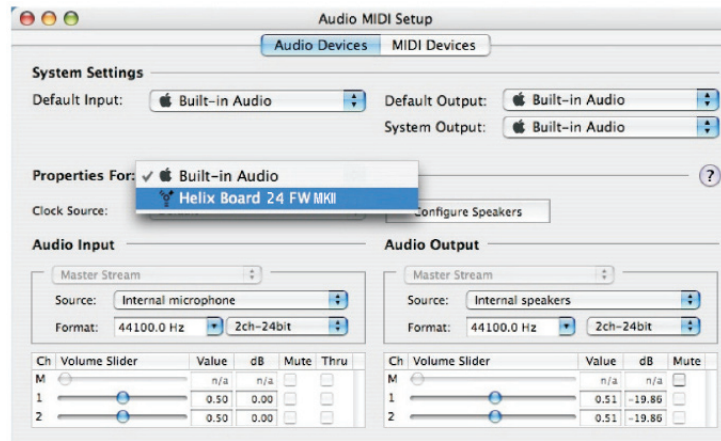


Enter the Audio Device's section. From the "Properties for" pull-down tab, select Helix Board 24 FireWire MKII.

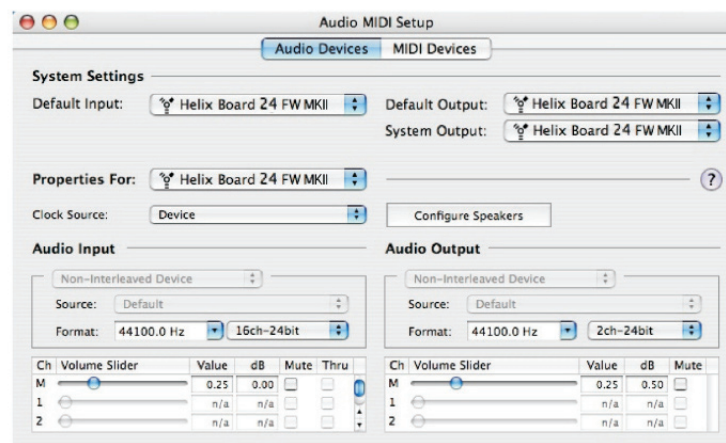

At the bottom of the window, users can edit the setup of the Helix Board 24 FireWire MKII.

Properties such as sampling rate and clock source can be altered.

Users may also opt to make the Helix Board 24 FireWire MKII their default input and/or output device.

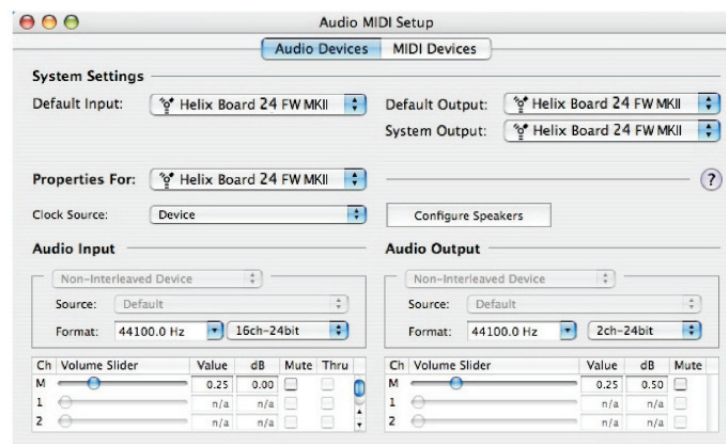

Mac users are able to use GarageBand Digital Audio Workstation Software, in conjunction with the Helix Board 24 FireWire MKII.

## Channel Assignment

When using a Digital Audio Workstation on a PC, and within the included Phonic Helix Board 24 FireWire MKII control panel software, the following names have been attributed to the input channels of the FireWire mixer. They can be altered through the control panel software included with the mixer.

FireWire Input Channel Name	Mixer Channel
Phonic HB 24 MKII CH 1	Channel 1
Phonic HB 24 MKII CH 2	Channel 2
Phonic HB 24 MKII CH 3	Channel 3
Phonic HB 24 MKII CH 4	Channel 4
Phonic HB 24 MKII CH 5	Channel 5
Phonic HB 24 MKII CH 6	Channel 6
Phonic HB 24 MKII CH 7	Channel 7
Phonic HB 24 MKII CH 8	Channel 8
Phonic HB 24 MKII CH 9	Channel 9
Phonic HB 24 MKII CH 10	Channel 10
Phonic HB 24 MKII CH 11	Channel 11
Phonic HB 24 MKII CH 12	Channel 12
Phonic HB 24 MKII CH 13	Channel 13
Phonic HB 24 MKII CH 14	Channel 14
Phonic HB 24 MKII CH 15	Channel 15
Phonic HB 24 MKII CH 16	Channel 16
Phonic HB 24 MKII CH 17	Channel 17
Phonic HB 24 MKII CH 18	Channel 18
Phonic HB 24 MKII Main L	user definable
Phonic HB 24 MKII Main R	user definable

To alter an input channel's name on your computer, open the Helix Board 24 FireWire MKII control panel software. On the left hand side of the control panel, users will find the settings categories. By clicking "Input Channels", the main window will display the titles input channels. You can then highlight the channel names and press the "Edit Channel Name" button on the bottom of the control window. A new window will appear that will allow users to adjust the channel name.

If you would like to use the Helix Board 24 FireWire MKII as your default audio output device on you PC, simply go into the Windows control panel, and select "Sound and Audio Devices". Select the Audio tab, and use the pull-down menu to select the Helix Board 24 FireWire MKII from the list of available output devices. The Helix Board 24 FireWire MKII can also be selected as the default output device for individual programs by editing said programs' settings / options.

## Cubase LE

Cubase LE is a fairly powerful program provided along with the Helix Board 24 FireWire MKII mixer that allows users to record, edit, delete, and alter their tracks. Please note that only 4 tracks can be recorded at once with the version of Cubase included, and users must upgrade or find other suitable DAW software if they choose to record more tracks.

### Installation

Insert the Cubase LE installation CD that came with your mixer into the CD drive of your computer. Run the installer. The serial number will be automatically entered in when installing.

### Setup

After successfully completing the installation process, the following process must be followed to work efficiently with the Helix Board 24 FireWire MKII mixer.

1. Open the Cubase LE program.
2. Go to the 'Devices' pull-down menu and select 'Device Setup'. On the left, select 'VST Multitrack'.
3. From the ASIO Driver drop-down list select the "Phonic ASIO Driver". A pop-up box will ask you if you want to switch the ASIO driver. Click 'Switch'. This completes the basic installation and setup.
4. Activating audio tracks received from the Helix Board mixer.
  - a. Go to the "devices" pull-down menu and select 'VST Inputs'. This will display the various inputs ("Phonic HB 24 MKII Ch 1", "Phonic HB 24 MKII Ch 2", etc.)
  - b. Activate 8 of these channels by clicking the "Active" button located next to each channel name. Please note, only 8 input channels can be activated at any one time. This is a limitation of Cubase LE, and if more input channels are needed, we suggest upgrading to a higher version of Cubase, or use other DAW software.
5. For further instructions on the operation of Cubase, please consult the user manual by pressing F1 while the program is open.

If you wish to reset the Helix Board 24 FireWire MKII ASIO driver, simply go to the 'devices' pull-down menu and select 'device setup'. Simply click "reset" and select the "Phonic ASIO Driver". Click 'ok' to continue and the Helix Board 24 FireWire MKII should once again become functional.



## Helix Board Control Panel

The Helix Board FireWire control panel can be accessed at any time by entering choosing the shortcut from your Programs menu. This program will not only allow users to alter their device and channel names and properties, but will also let them correct for latency issues, change sampling rates, and so forth. When opening the software, a number of options will be available for users to select from, allowing them to adjust the available properties.

### Devices

In the Devices section, users are able to view and edit the name of the Phonic FireWire Devices connected to their computer.

Device name	Serial number
Phonic HB 24 FW MKII	0014960000000000

Edit Device Name

### Input Channels

The Input Channels section allows users to view and edit the name of the various input channels received from the FireWire input. For a list of default channel names, please consult the table on page 18.

Device name	Channel name	ASIO display name
Phonic HB 24 FW MKII	Phonic HB 24 MKII Ch 1	Phonic HB 24 MKII Ch 1
Phonic HB 24 FW MKII	Phonic HB 24 MKII Ch 2	Phonic HB 24 MKII Ch 2
Phonic HB 24 FW MKII	Phonic HB 24 MKII Ch 3	Phonic HB 24 MKII Ch 3
Phonic HB 24 FW MKII	Phonic HB 24 MKII Ch 4	Phonic HB 24 MKII Ch 4
Phonic HB 24 FW MKII	Phonic HB 24 MKII Ch 5	Phonic HB 24 MKII Ch 5
Phonic HB 24 FW MKII	Phonic HB 24 MKII Ch 6	Phonic HB 24 MKII Ch 6
Phonic HB 24 FW MKII	Phonic HB 24 MKII Ch 7	Phonic HB 24 MKII Ch 7
Phonic HB 24 FW MKII	Phonic HB 24 MKII Ch 8	Phonic HB 24 MKII Ch 8
Phonic HB 24 FW MKII	Phonic HB 24 MKII Ch 9	Phonic HB 24 MKII Ch 9
Phonic HB 24 FW MKII	Phonic HB 24 MKII Ch 10	Phonic HB 24 MKII Ch 10
Phonic HB 24 FW MKII	Phonic HB 24 MKII Ch 11	Phonic HB 24 MKII Ch 11
Phonic HB 24 FW MKII	Phonic HB 24 MKII Ch 12	Phonic HB 24 MKII Ch 12
Phonic HB 24 FW MKII	Phonic HB 24 MKII Ch 13	Phonic HB 24 MKII Ch 13
Phonic HB 24 FW MKII	Phonic HB 24 MKII Ch 14	Phonic HB 24 MKII Ch 14
Phonic HB 24 FW MKII	Phonic HB 24 MKII Main L	Phonic HB 24 MKII Main L
Phonic HB 24 FW MKII	Phonic HB 24 MKII Main R	Phonic HB 24 MKII Main R

Edit Channel Name ☐ Include device name in ASIO display name

### Output Channels

By entering the Output Channels section, users can view and edit the names of the two output channels from the computer to the Helix Board 24 FireWire MKII mixer.

Device name	Channel name	ASIO display name
Phonic HB 24 FW MKII	Phonic HB 24 MKII Out L	Phonic HB 24 MKII Out L
Phonic HB 24 FW MKII	Phonic HB 24 MKII Out R	Phonic HB 24 MKII Out R

Edit Channel Name ☐ Include device name in ASIO display name

### Synchronization

In the Synchronization section, users can adjust the sampling rate and other synchronization properties. Many of these adjustable properties, as they are, are set for optimum performance and, unless you are sure of what you need to change, are probably best left alone.

Synchronization Settings

Clk Master	Devices	Current Synchronisation Source
<input type="checkbox"/>	PC Driver	External
<input checked="" type="checkbox"/>	Phonic HB 24 FW MKII	CSP (MSU Synch Output)

Change Synchronisation Mode

☒ Sampling rate is set manually  
☐ Sampling rate is set automatically as defined by the clock master

Apply


First off, the synch mode can be altered, though making this alteration is not recommended for novice users. The synch mode is basically the way the computer determines what the 'clock source' (ie. device that your computer will use to determine the timing of all digital signals received) will be. The default setting for this feature is "CSP", meaning the Helix Board 24 FireWire MKII is the "master" clock source of the device. The other options allow users to make the Helix Board 24 FireWire MKII follow the "timing" of whichever device is the clock source. Having two clock sources has the potential to create very undesirable audio, so it is best avoided. If the Helix Board 24 FireWire MKII is the only piece of digital audio equipment attached to the computer, there is no reason this option should be changed.

Users are also able to change between automatic and manual sampling rate settings. When the sampling rate is manually set, users can select between sampling rates of 44.1, 48.0, 88.2 and 96.0 kHz per second. Many devices have sampling rates that do not surpass 44.1 kHz per second, therefore, when using multiple digital devices, users are advised not to exceed this level unless they are sure the secondary device's sampling rate can .

Settings

Users are able to adjust various buffer times in the Settings section.

The Stream Buffer Depth is adjustable between 0.5 and 20 milliseconds. It adjusts the buffer used when streaming a signal from the Helix Board 24 FireWire MKII. If the depth is set too high, an obvious latency will become evident. If the depth is too low, various clicks and pops may become obvious. It is best to set the Stream Buffer Depth to a level that allows users to get the lowest latency, while still maintaining an optimal performance. The default settings are ideal for most computers.

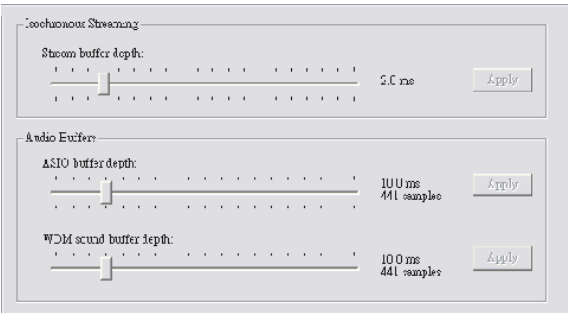

The ASIO Buffer Depth is adjustable between 4 and 40 milliseconds. This allows users to adjust the latency of the stream received by ASIO driver-based software (including Steinberg Cubase LE).

The WDM (Windows Driver Model) Sound Buffer Depth is adjustable between 4 and 40 milliseconds. This allows users to adjust the latency of the stream received by WDM based programs.

Also in this section, users are able to view their “drop out statistics”, where the number of times the FireWire connection has been interrupted can be viewed.

Streams

In the Streams section, the Helix Board 24 FireWire MKII device properties can be viewed. Each input and output stream can be scrutinized, and the isochronous stream number and its supported sampling rates can be viewed.

Device name	Audio Out Plug	Audio In Plug	Synch Out Plug	Synch In Plug
Phonic HB 24 FW MKII	connected (1)	connected (0)		




## Digital Effects Table

NO	PARAMETER SETTING	PROGRAM NAME	
	ROOM	REV-TIME	EARLY LEVEL
00	COMPACT ROOM 1	0.05	100
01	COMPACT ROOM 2	0.4	0
02	SMALL ROOM 1	0.45	100
03	SMALL ROOM 2	0.6	90
04	MID ROOM 1	0.9	100
05	MID ROOM 2	1	50
06	BIG ROOM 1	1.2	100
07	TUNNEL	3.85	100
	HALL	REV-TIME	EARLY LEVEL
08	JAZZ CLUB	0.9	90
09	SMALL HALL 1	1.5	72
10	SMALL HALL 2	1.75	85
11	SPRING HALL	1.9	98
12	MID HALL 1	2.3	100
13	MID HALL 2	2.45	80
14	RECITAL HALL	2.7	96
15	BIG HALL 2	3.3	88
	PLATE	REV-TIME	HPF
16	SMALL PLATE	0.9	0
17	TAIL PLATE	1.2	20
18	MID PLATE 1	1.3	0
19	MID PLATE 2	2.2	0
20	REVERSE PLATE	2.25	42
21	LONG PLATE 1	2.6	80
22	LONG PLATE 2	3	625
23	LONG PLATE 3	4.2	0
	DELAY (STEREO)	DELAY AVERG.	R-BEVEL
24	SHORT DELAY 1	0.07	60
25	SHORT DELAY 2	0.14	60
26	PING PONG DELAY	0.11	55
27	MID DELAY 1	0.15	55
28	MID DELAY 2	0.3	60
29	SHORT DELAY 1(MONO)	0.06	100
30	MID DELAY 1 (MONO)	0.13	100
31	LONG DELAY 1(MONO)	0.18	100
	CHORUS	LFO	DEPTH
32	SOFT CHORUS	0.2	56
33	SOFT CHORUS 2	0.5	70
34	SOFT CHORUS 3	0.8	75
35	WARM CHORUS	1.8	85
36	WARM CHORUS 1	3.2	80
37	WARM CHORUS 2	5.2	45
38	WARM CHORUS 3	7.8	52
39	HEAVY CHORUS	9.6	48
	FLANGER	LFO	DEPTH
40	CLASSIC FLANGER 1	0.1	44
41	CLASSIC FLANGER 2	0.3	63
42	GENTLE FLANGER	0.6	45
43	WARM FLANGER	1.6	60
44	MODERN FLANGER 1	2	85
45	MODERN FLANGER 2	2.8	80
46	DEEP FALANGER 1	4.6	75
47	DEEP FALANGER 2	10	60
	PHASER	LFO	DEPTH
48	CLASSIC PHASER 1	0.1	3.6
49	CLASSIC PHASER 2	0.4	2.6
50	COOL PHASER	1.4	0.7
51	WARM PHASER	3.2	0.3
52	HEAVY PHASER 1	5	1.2
53	HEAVY PHASER 2	6	2.8
54	WILD PHASER 1	7.4	0.8
55	WILD PHASER 2	9.6	4.8


NO	PARAMETER SETTING	PROGRAM NAME	
	PAN	SPEED	TYPE
56	SLOW PAN	0.1	R-->L
57	SLOW PAN 1	0.1	R<-->L
58	SLOW PAN 2	0.4	R-->L
59	MID SHIFT	0.8	R<-->L
60	MID SHIFT 1	1.2	L-->R
61	MID SHIFT 2	1.8	L-->R
62	MID SHIFT 3	1.8	R-->L
63	FAST MOVE	3.4	R<-->L
	TREMOLO	SPEED	MODE-TYPE
64	LAZY TREMOLO	0.8	TRG
65	VINTAGE TREMOLO	1.5	TRG
66	WARM TREMOLO	2.8	TRG
67	WARM TREMOLO 1	4.6	TRG
68	HOT TREMOLO	6.8	TRG
69	HOT TREMOLO 1	9.6	TRG
70	CRAZY TREMOLO 1	15	TRG
71	CRAZY TREMOLO 2	20	TRG
	DELAY+REV	REV	DELAY
72	DELAY+REV 1	1	1
73	DELAY+REV 2	2	2
74	DELAY+REV 3	3	3
75	DELAY+REV 4	4	4
76	DELAY+REV 5	5	5
77	DELAY+REV 6	6	6
78	DELAY+REV 7	7	7
79	DELAY+REV 8	8	8
	CHORUS+REV	REV	CHORUS
80	CHORUS+REV 1	1	1
81	CHORUS+REV 2	2	2
82	CHORUS+REV 3	3	3
83	CHORUS+REV 4	4	4
84	CHORUS+REV 5	5	5
85	CHORUS+REV 6	6	6
86	CHORUS+REV 7	7	7
87	CHORUS+REV 8	8	8
	FLANGER+REV	REV	FLANGER
88	FLANGER+REV 1	1	1
89	FLANGER+REV 2	2	2
90	FLANGER+REV 3	3	3
91	FLANGER+REV 4	4	4
92	FLANGER+REV 5	5	5
93	FLANGER+REV 6	6	6
94	FLANGER+REV 7	7	7
95	FLANGER+REV 8	8	8
	GATED-REV	RELEASE	REV
96	GATED-REV-1 9	0.02	TAIL PLATE
97	GATED-REV-2 10	0.2	TAIL PLATE
98	GATED-REV-1 9	0.02	REVERSE PLATE
99	GATED-REV-2 10	0.5	REVERSE PLATE
	TAP DELAY	FB LEVEL	RANGE
A0	TAP DELAY	0	100mS - 2.7S
A1	TAP DELAY	10	100mS - 2.7S
A2	TAP DELAY	20	100mS - 2.7S
A3	TAP DELAY	30	100mS - 2.7S
A4	TAP DELAY	40	100mS - 2.7S
A5	TAP DELAY	50	100mS - 2.7S
A6	TAP DELAY	60	100mS - 2.7S
A7	TAP DELAY	70	100mS - 2.7S
A8	TAP DELAY	80	100mS - 2.7S
	TEST TONE	FREQUENCY	SHAPE
T0	LOW FREQUENCY	100Hz	SINEWAVE
T1	MID FREQUENCY	1kHz	SINEWAVE
T2	HIGH FREQUENCY	10kHz	SINEWAVE
PN	PINK NOISE	20Hz~20kHz	

## Application

### Live Band Multi-Track Recording and Monitoring

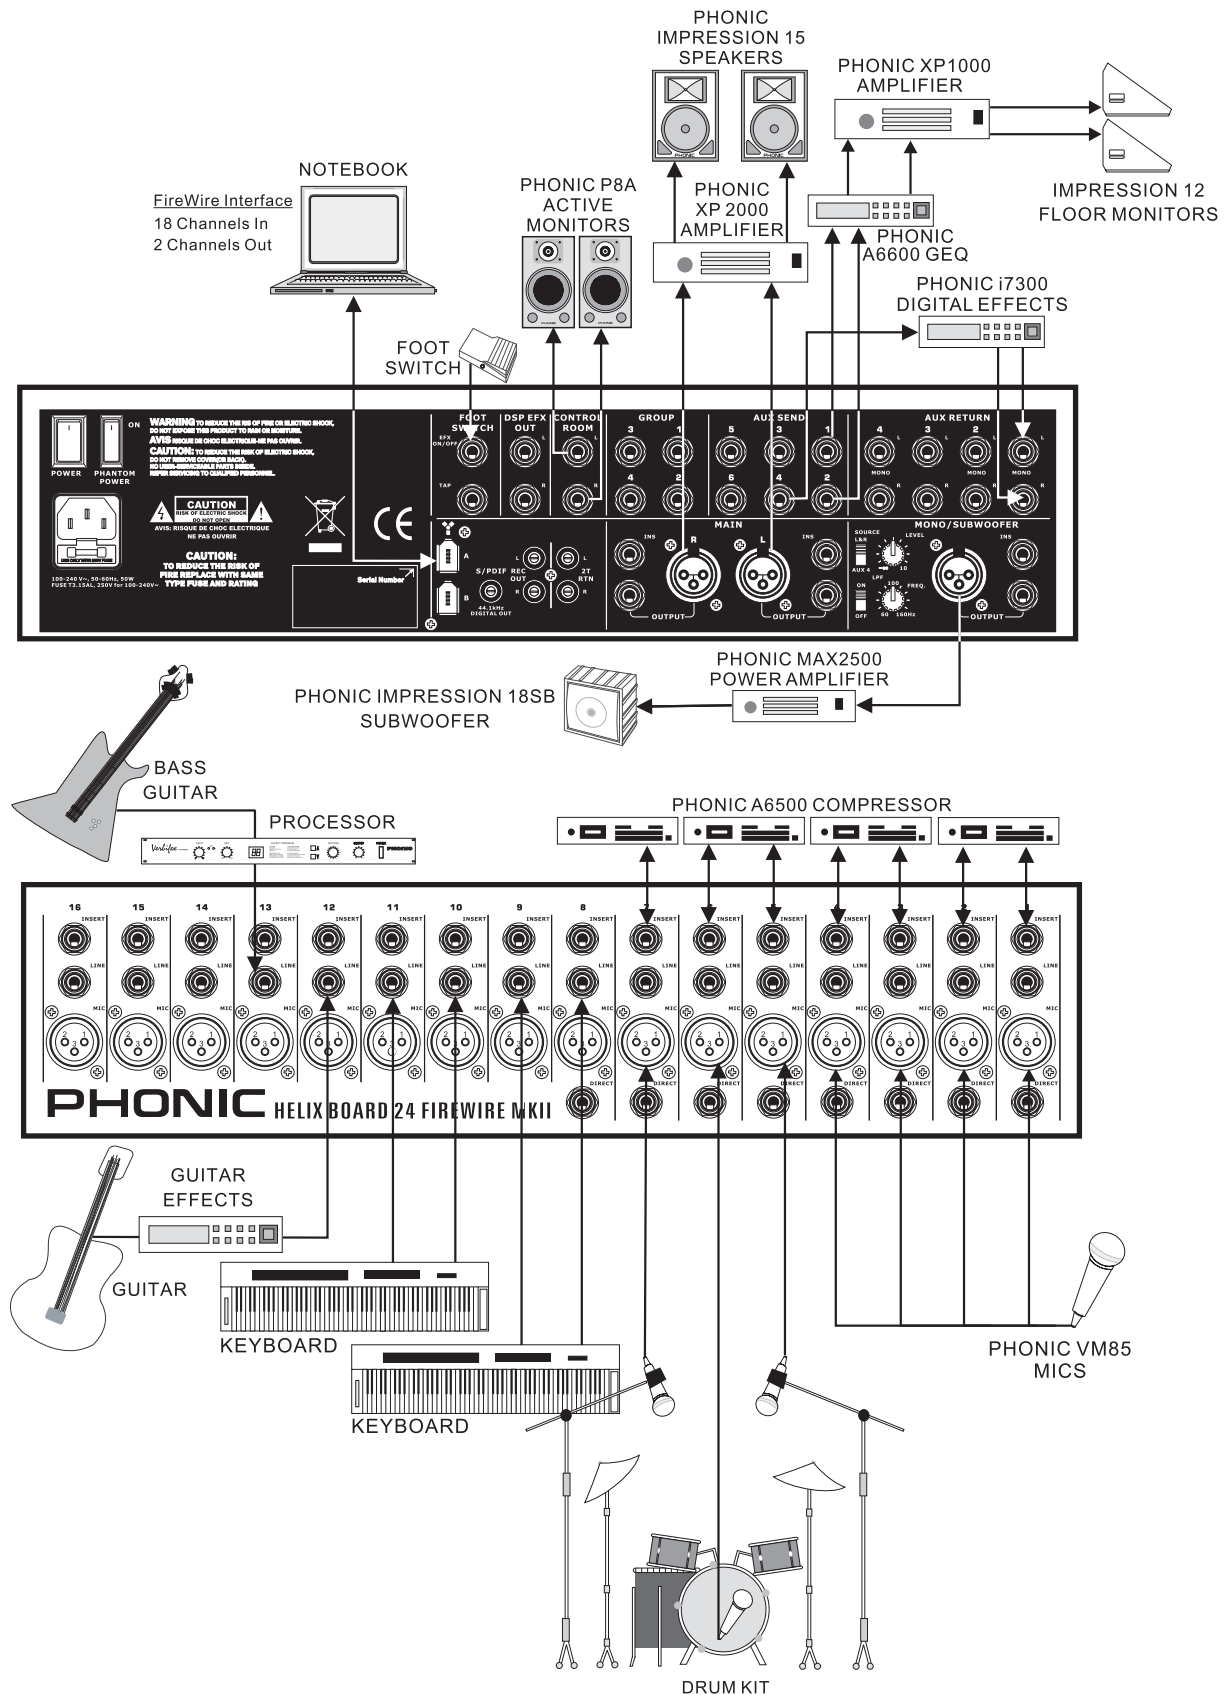

## Studio Recording and Monitoring

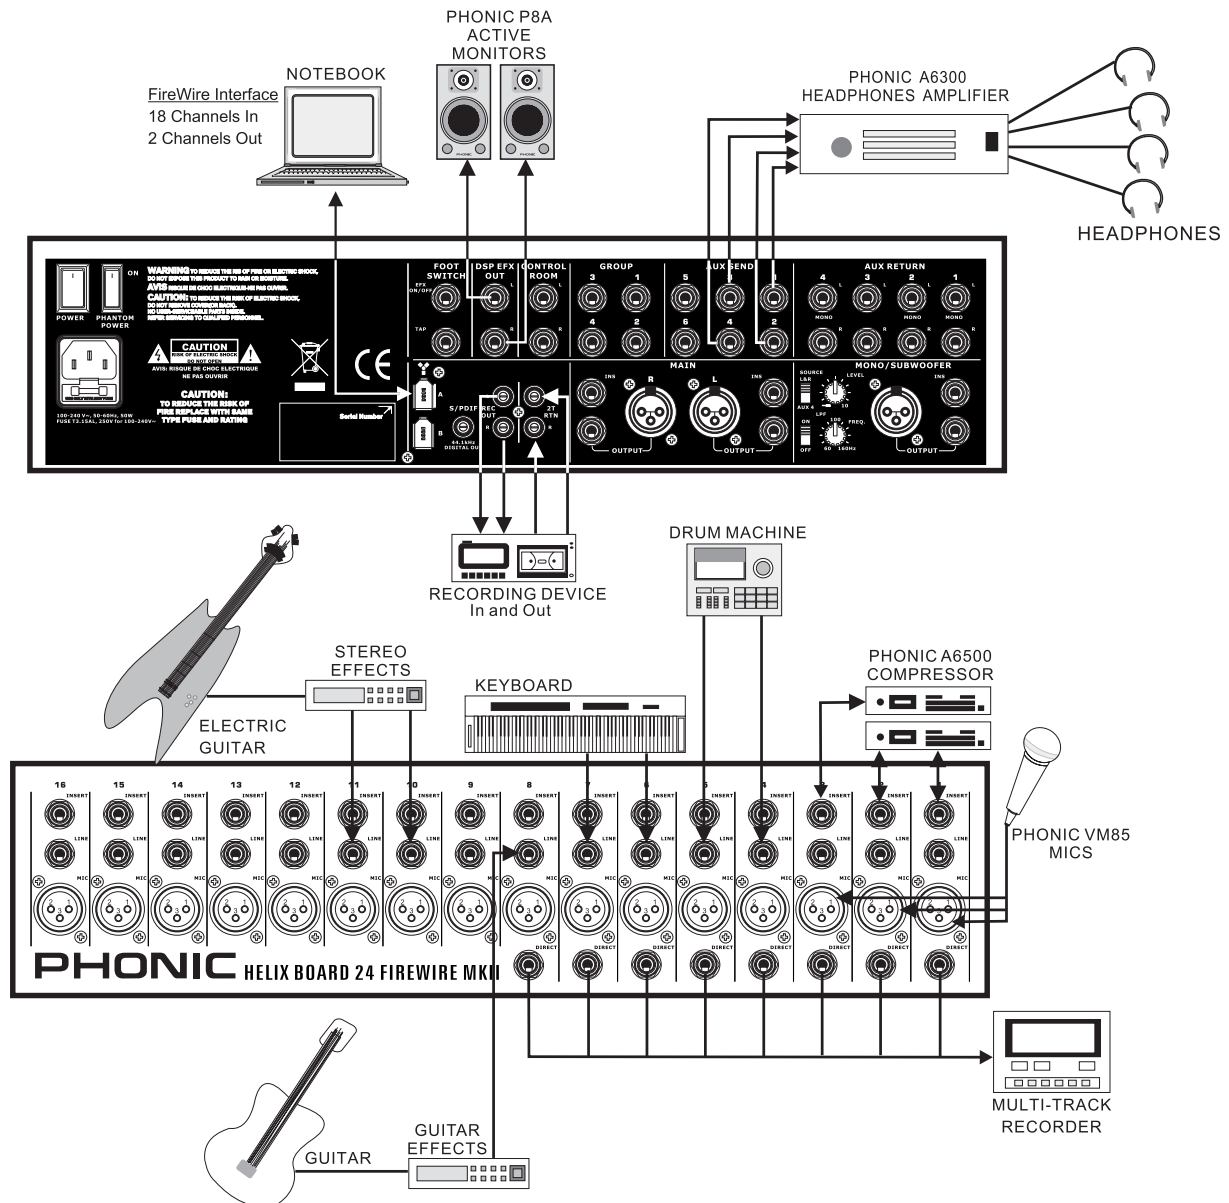


## Specifications

	Helix Board 24 FireWire MKII
<b>Inputs</b>	
Balanced Mic / Line channel	16
Aux Return	4 stereo
2T Input	Stereo RCA
<b>Outputs</b>	
Main L/R Stereo	2 x 1/4" TRS, Bal. & 2 x XLR
Main out with inserts	Yes
Main Mono	1 x 1/4" TRS, Bal. & 1 x XLR
Main Mono out with inserts	Yes
Subgroup outputs	4x 1/4" TRS, Bal.
Aux sends	6x 1/4" TRS, Bal.
DSP effect outputs	2 x 1/4" TS
CTRL RM L/R	2 x 1/4" TS
Phones	1
SPDIF digital output	44.1kHz
Firewire Interface	18 out & 2 in, 24-bit / 96 kHz, 2 FireWire ports
Channel Strips	16
Aux Sends	6 with 4 volume control
Pan/Balance Control	Yes
Channel On/Mute	Yes
Channel solo with metering	Yes
LED indicators	On, Signal, Peak/Solo
Bus assign switches	1/2, 3/4, L/R
Volume Controls	60mm fader
<b>Master Section</b>	
FireWire channel 17/18 routing switch	Source from main mix, group 1/2, and aux 3/4
Aux Send Masters	4
Master Aux Send Solo	4
Stereo Aux Returns	4
Aux Return Assign to Subgroup	1
Effects Return to Monitor	3
Global PRE/POST Solo Mode	Yes
Faders	4 subgroups, Main L/R
<b>Metering</b>	
Number of Channels	2
Segments	12
Phantom Power Supply	+48V DC
Switches	Master switch
Effect Processor (40-bit DSP)	High definition algorithm 100 programs plus tap delay; foot switch (effect on/off, tap)
<b>Frequency Response (Mic input to any output)</b>	
20Hz ~ 60KHz	+0/-1 dB
20Hz ~ 100KHz	+0/-3 dB

<b>Crosstalk (1KHz @ 0dBu, 20Hz to 20KHz bandwidth, channel in to main L/R outputs)</b>	
Channel fader down, other channels at unity	<-90 dB
<b>Noise (20Hz~20KHz; measured at main output, Channels 1-4 unit gain; EQ flat; all channels on main mix; channels 1/3 as far left as possible, channels 2/4 as far right as possible. Reference=+6dBu)</b>	
Master @ unity, channel fader down	-86.5 dBu
Master @ unity, channel fader @ unity	-84 dBu
S/N ratio, ref to +4	>90 dB
Microphone Preamp E.I.N. (150 ohms terminated, max gain)	<-129.5 dBm
THD (Any output, 1KHz @ +14dBu, 20Hz to 20KHz, channel inputs)	<0.005%
CMRR (1 KHz @ -60dBu, Gain at maximum)	80dB
<b>Maximum Level</b>	
Mic Preamp Input	+10dBu
All Other Inputs (except inserts)	+22dBu
Balanced Outputs	+28dBu
All other outputs	+22dBu
<b>Impedance</b>	
Mic Preamp Input	2 K ohms
All Other Input (except insert)	10 K ohms
RCA 2T Output	1.1 K ohms
All other outputs	100 ohms
<b>Equalization</b>	
Low EQ	80Hz
Mid EQ	100-8k Hz, sweepable
Hi EQ	12 kHz
Low cut filter	75 Hz (-18 dB/oct)
<b>Power and Physical Attributes</b>	
Built-in Switching Power Supply	100-240 VAC, 50/60 Hz
Net Weight	10.5 kg (23.1 lbs)
Dimensions (WxHxD)	445 x 212 x 432 mm (17.5" x 8.3" x 17")


Dimensions

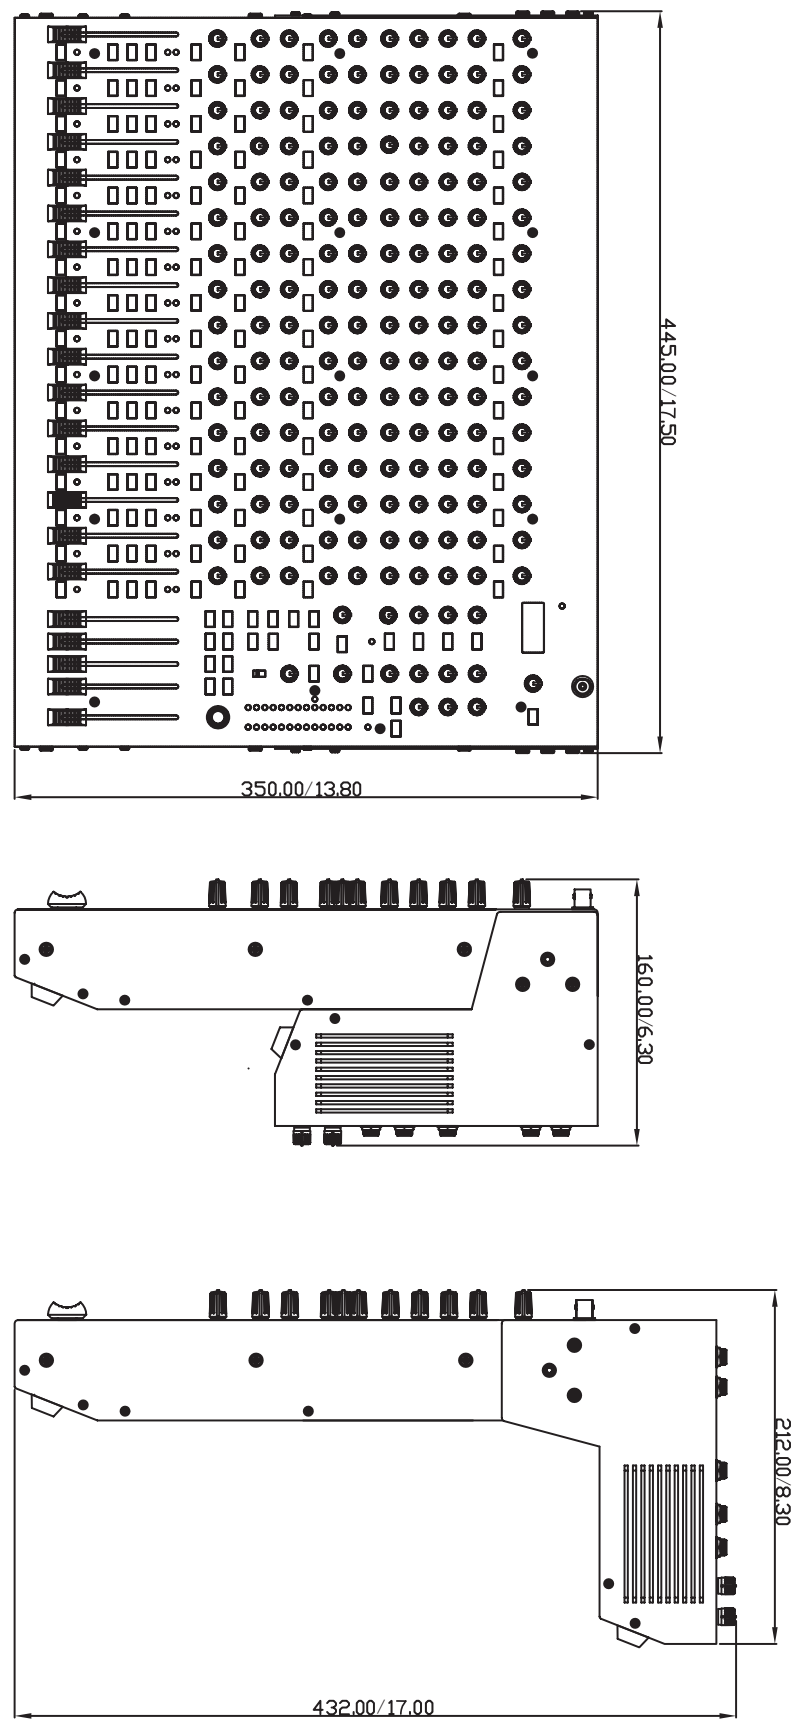

\* All measurements are shown in mm/inches.



# Block Diagram

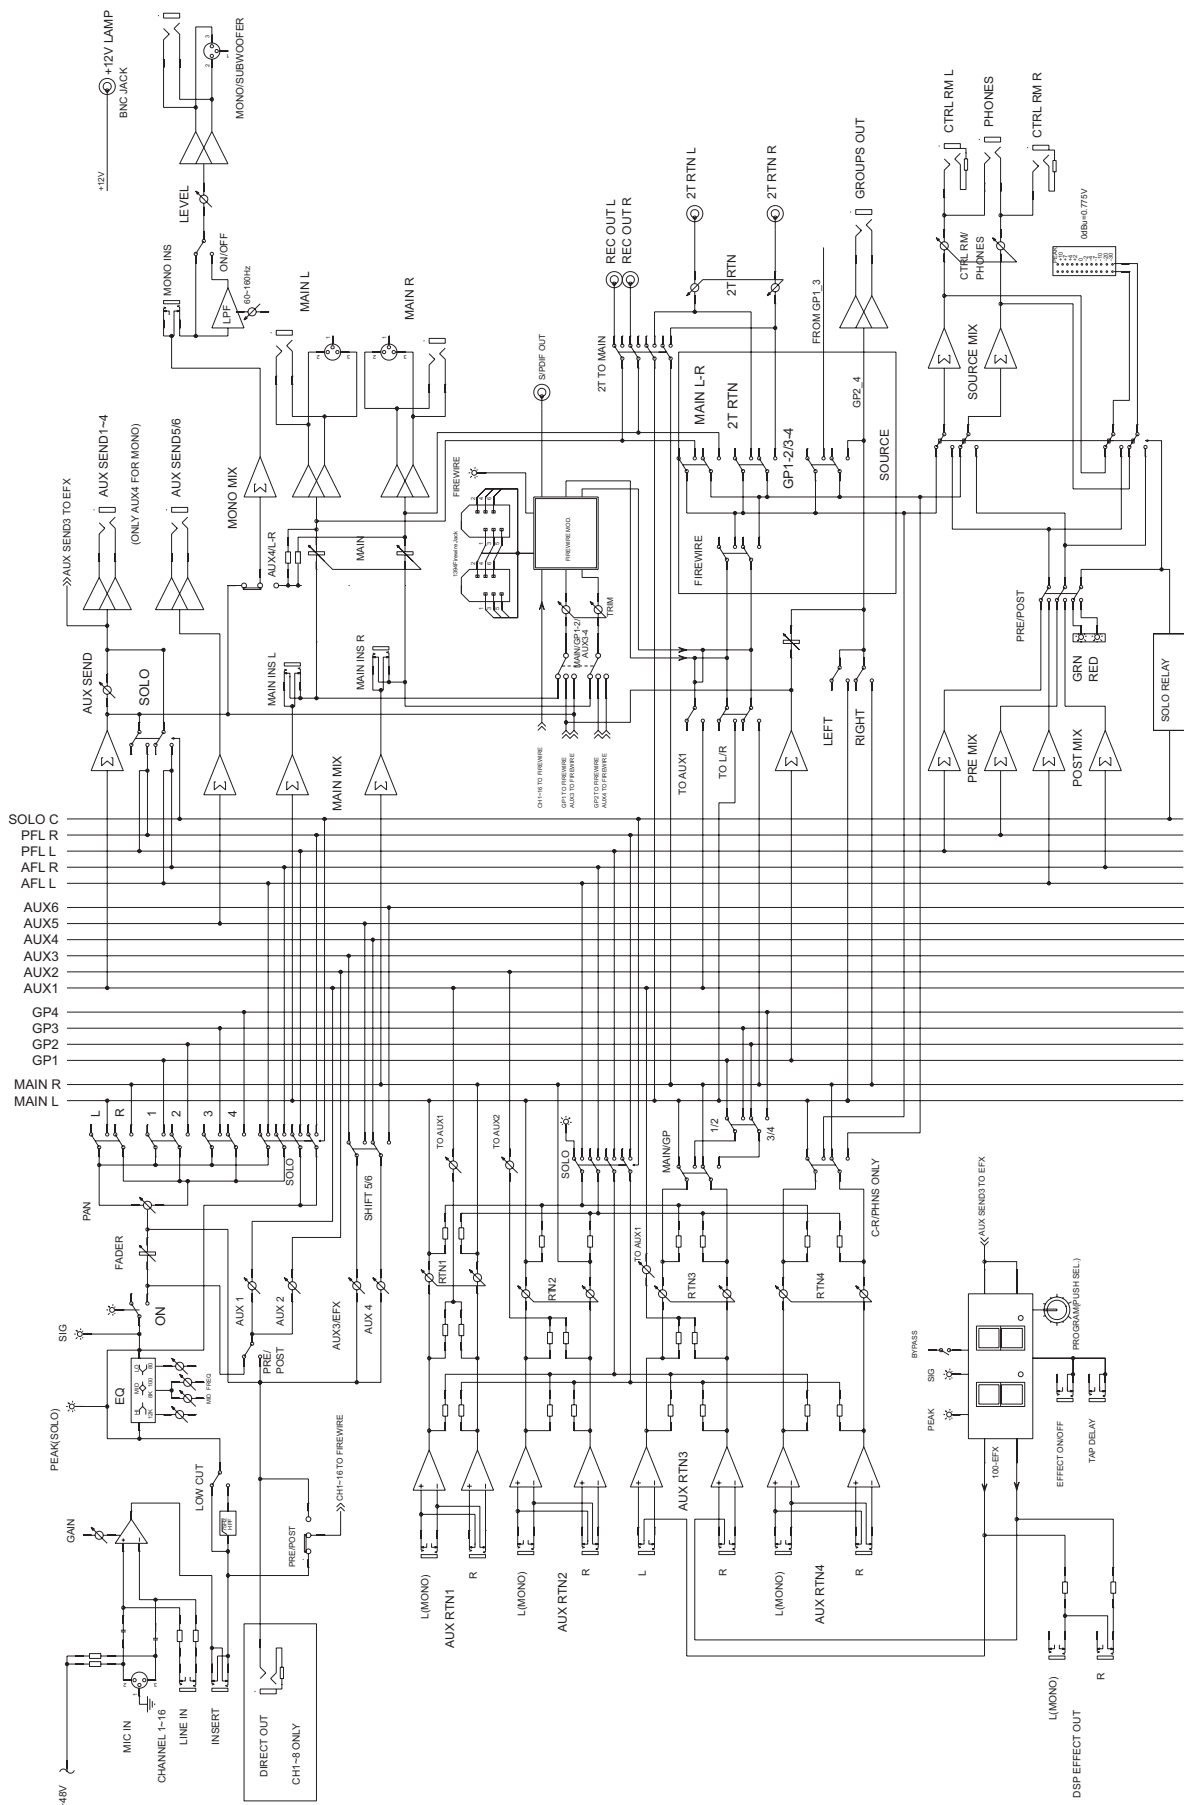

## **TO PURCHASE ADDITIONAL PHONIC GEAR AND ACCESSORIES**

To purchase Phonic gear and optional accessories, contact any authorized Phonic distributor. For a list of Phonic distributors please visit our website at [www.phonic.com](http://www.phonic.com) and click on Get Gear. You may also contact Phonic directly and we will assist you in locating a distributor near you.

## **SERVICE AND REPAIR**

Phonic has over 100 service centers worldwide. For replacement parts, service and repairs please contact the Phonic distributor in your country. Phonic does not release service manuals to consumers, and advice users to not attempt any self repairs, as doing so voids all warranties. You can locate a dealer near you at [www.phonic.com](http://www.phonic.com).

## **WARRANTY INFORMATION**

Phonic stands behind every product we make with a no-hassles warranty. Warranty coverage may be extended, depending on your region. Phonic Corporation warrants this product for a minimum of one year from the original date of purchase against defects in material and workmanship under use as instructed by the user's manual. Phonic, at its option, shall repair or replace the defective unit covered by this warranty. Please retain the dated sales receipt as evidence of the date of purchase. You will need it for any warranty service. No returns or repairs will be accepted without a proper RMA number (return merchandise authorization). In order to keep this warranty in effect, the product must have been handled and used as prescribed in the instructions accompanying this warranty. Any tempering of the product or attempts of self repair voids all warranty. This warranty does not cover any damage due to accident, misuse, abuse, or negligence. This warranty is valid only if the product was purchased new from an authorized Phonic dealer/distributor. For complete warranty policy information, please visit <http://www.phonic.com>.

## **CUSTOMER SERVICE AND TECHNICAL SUPPORT**

We encourage you to visit our online help at <http://www.phonic.com/help/>. There you can find answers to frequently asked questions, tech tips, driver downloads, returns instruction and other helpful information. We make every effort to answer your questions within one business day.

**Phonic America Corporation**  
**6103 Johns Road #7**  
**Tampa, FL 33634**  
**(813) 890-8872**  
**[support@phonic.com](mailto:support@phonic.com)**  
**<http://www.phonic.com>**

# **PHONIC**

**PHONIC**  
[WWW.PHONIC.COM](http://WWW.PHONIC.COM)